



Irrigation: Inspecting and Correcting Turf Irrigation System Problems

Fact Sheet 4.722

By C. Swift, Kurt Jones

Revised 10/05/2021

Crop Series| Irrigation

The Procedure

The following can be accomplished when the water is first turned on at the beginning of the irrigation season.

Examine each irrigation sprinkler to determine if:

- Are any pop-up spray heads, impact sprinkler or rotor sprinkler, nozzles, or sprinkler bodies broken? These need to be replaced with the same size and manufacturer parts (Figure 2).
- Are sprinkler filters clean? Replace missing filters.
- Is the sprinkler head above or below grade? See level sprinkler heads with the top of the lawn (Figure 3). Use a bulls-eye level to identify tilted sprinkler heads (a \$2 hardware store item) (Figure 4). Adjust tilted sprinkler heads by removing soil from the high side of the sprinkler body with a curved garden spade. Adjust the sprinkler body to the level position (half a bubble within the circle) and back-fill the void around the sprinkler body to the top of the lawn (see Figure 1). On sloping lawns, the level bubble should be on the up-slope side of the sprinkler. Sometimes the sprinkler bodies are tilted because a large root is pressing against the body (Figure 5). A solution is to dig the hole around the sprinkler a little bigger and use a dry-wall saw to cut the root on both sides of the sprinkler body.

- Back-fill the hole with the soil that was removed and realign the sprinkler.
 - Sprinkler heads that are too low do not distribute the water properly as the water is deflected (Figure 6). All sprinkler riser stems should be at least 4 inches or greater in length.
 - Sprinkler heads that are too high may be damaged when mowing.
 - Sprinkler heads that are too high or too low are a tripping hazard.
 - In order to lift or lower the sprinkler head, you may need to adjust the swing pipe or use a different length nipple extension (Figure 7). Level the sprinkler body and back-fill with sand. Remove the nozzle and flush the sprinkler head.
- Is the top of the irrigation sprinkler head parallel with the slope of the lawn (Figure 8)?
- Are the bodies of impact sprinklers filled with debris? Debris prevents the inner unit from extending to its full height and restricts the movement of the sprinkler unit. Removing the inner workings and cleaning out the body and the filter may be required (Figure 9). A specialized key is available from irrigation supply companies to remove the inner workings of impact sprinkler heads.



Quick Facts

- Proper maintenance of the irrigation system is critical to ensure uniform application of water in turf areas.
- Irrigation sprinkler heads that tilt, are below grade, plugged, or operate at the wrong pressure, etc. affect the application of irrigation water.
- Inspect underground sprinkler systems at least once a year to locate and correct problems. If you do not feel comfortable locating these problems, contact a qualified Certified Landscape Irrigation Auditor (CLIA), www.irrigation.org, or find out if the Colorado State University Extension Lawncheck program is available in your county.
- If you don't feel comfortable doing your own maintenance, contact a qualified Certified Irrigation contractor (CIA), www.irrigation.org.

*C. Swift, former Colorado State University Extension horticulture agent, Tri River Area, Grand Junction, CO.; R.D. Khalsa irrigation designer, Department of Interior, Bureau of Reclamation.

Photos provided by C.E. Swift and A. Blessinger, certified landscape irrigation auditors.

**Kurt Jones, Colorado State University Extension agent, natural resources and agriculture, Chaffee County. Revised 12/20.

extension.colostate.edu



Figure 1: Types of Irrigation Sprinkler Heads. Left: Pop-up Spray Head showing the riser stem. Center Impact Sprinkler Head with maintenance key. Right: Rotor Sprinkler Head showing the riser stem.

- Is the spacing of the sprinklers appropriate for the sprinkler head? The proper spacing is critical to ensure uniform coverage of the irrigated area. Using graph paper, sketch a map of the lawn area. Turn each sprinkler zone on and flag each sprinkler head. Turn the water off and measure the distance between each sprinkler and log it on the lawn sketch.
 - The manufacturer's website provides specifications to include appropriate spacing on each of their spray heads or nozzles. See links below. Irrigation contractors sometimes take shortcuts when installing systems, increasing the distance between sprinkler heads to reduce their cost by reducing the number of sprinkler heads per zone.
 - If there is a large variation in sprinkler spacing there are two options. Either move the sprinklers to improve the spacing or change the sprinkler nozzle size to improve the application uniformity.
 - Are all the sprinklers on the same zone of the same type and manufacture?
 - Rotor, impact and spray heads apply different amounts of water per area. When different

- sprinkler types are on the same zone different amounts of water will be applied resulting in some areas receiving more water than other areas. The application rate may range from 0.4 inches per hour of water to over 2.0 inches per hour depending on the sprinkler type spacing and nozzle.

- - If there is a large variation in sprinkler spacing; there are two options. Either move the sprinklers to improve the spacing or change the sprinkler nozzle size to improve the application uniformity.
 - Are all the sprinklers on the same zone of the same type and manufacture?
 - - Rotor, impact and spray heads apply different amounts of water per area. When different
 - sprinkler types are on the same zone different amounts of water will be applied resulting in some areas receiving more water than other areas. The application rate may range from 0.4 inches per hour of water to over 2.0 inches per hour depending on the sprinkler type spacing and nozzle.
- Check impact and rotor sprinklers with interchangeable nozzles to ensure they have the proper nozzle. Impact sprinklers are typically sold with one nozzle color. These are color coded to identify the amount of water they apply. Rotor sprinklers are sold with a nozzle tree with all of the nozzle sizes. The installer must select the proper nozzle for the application. If two sprinklers have the same nozzle color, and one sprinkler covers 90 degrees, it applies four times the amount of water as the sprinkler that waters 360 degrees. Replace nozzles to balance the application rate as necessary.



Figure 2: Broken Sprinkler Head



Figure 3: Sprinkler Head is too high and leaking



Figure 4: Bulls-eye level on top of a pop-up Sprinkler head



Figure 5: Tilted sprinkler head.



Figure 7: Swing pipe and nipple extension

- Are nozzles or spray heads damaged?
- Are valve boxes too high or too low (Figure 10)?
 - - Too high is a tripping hazard.
 - - Three and 6-inch extension units are available for boxes that are too low.
 - - The high valve box may need to be dug up and reset.

Turn the zone/station on and check the following.

- Are the sprinklers applying a uniform pattern of water (Figure 11)? If not, the nozzles or filter could be plugged. Nozzles for pop-up sprinklers should have a filter located under the nozzle. Remove and clean or replace the nozzle and/or filter.
- Are there cracks or leaks in each sprinkler head? Cracked sprinkler heads are often due to improper winterizing of the system or lawn-mower blight. Replace cracked sprinkler heads.
 - Do the caps on top of pop-up spray heads leak? Tighten the cap by hand, or replace the cap and internal parts if necessary.



Figure 6: Water deflected due to the sprinkler

- Do the sprinkler heads at the bottom of a slope continue to drain when the system is turned off?
 - Replace draining sprinkler heads with check valves or seal-a-matic (SAM) sprinkler heads.
 - If the problem is a check valve or SAM body, unscrew the cap and remove the inner mechanism to determine if the rubber ring or gasket is missing. If missing, replace the gasket or internal parts of the sprinkler (see Figure 12 and 13).



Figure 10: Low valve box



Figure 8: This sprinkler head is not parallel to the slope

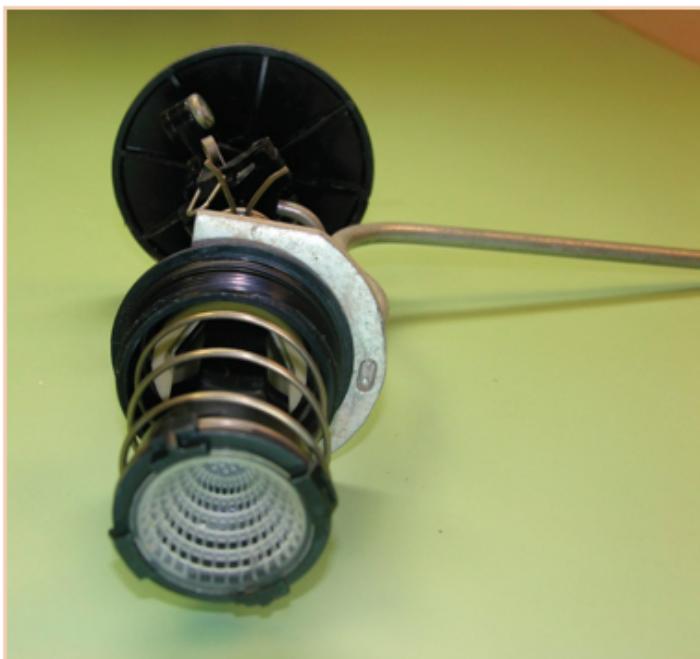


Figure 9: The inner workings of an impact sprinkler head.
Note filter at the bottom

- Look for breaks in the pipe. This will be evident by extremely spongy and/or wet spots, or high water bills. The turf can even be forced up by the leak creating a bubble of turf. This is often due to improper winterization. Always connect the sprinkler head using the bottom inlet not the inlet on the side of the body. Another way to determine if there is a leak is to count up the nozzles in a zone and determine what the zone flow rate should be. Turn the zone on and time the water meter to see if the actual flow is close to the calculated flow.
- You may need to correct the arc and radius of throw of the water pattern to ensure proper coverage.
 - Except for sprinkler heads/nozzle providing 360 degrees (arc) of coverage, most heads/nozzles need to be adjusted by lining up the left side of the arc with the left side of the area to be irrigated. Some brands of rotary sprinkler heads adjust from the left and others adjust from the right. Rotary and pop-up spray heads have a ratchet assembly that permits the riser stem to be twisted. Twist clockwise to avoid screwing the sprinkler body off the barbed elbow or riser nipple. Some nozzles have a flat spot or mark as the left edge indicator to make it easier to set the left edge. Once the left side of the water pattern has been adjusted, the sprinkler head or nozzle will most likely need to be adjusted to cover the remaining area.

Definitions

Arc- the degrees of water coverage. i.e. 90 degrees, 180 degrees, 360 degrees etc.

Matched Precipitation Rate (MPR) nozzles - the precipitation rate is the same regardless of the watering arc and radius of throw.

Nozzle - the final orifice that controls the characteristics of the flow of water as it exists the sprinkler.

Precipitation rate - the volume of water applied in a specific area, during a specific amount of time.

Radius of throw - the distance from the sprinkler head to the furthest point of water application.

Sprinkler Body - the casing in which the irrigation mechanism is enclosed.

Riser stem - the plastic or metal tube that extends above the sprinkler body where the nozzle is attached.

Stream rotor - multiple streams of water rotate around the sprinkler, one stream following the other.

- Impact sprinklers have two wire clips on the riser stem just below the nozzle. Squeeze the clips and reset them to cover the desired arc. Some 360-degree rotors and impact sprinklers are non-reversing.
- Once the arc is set, adjust the radius. Rotary and impact sprinkler heads have a variety of nozzle sizes and trajectory angles that can be used to change the flow and radius of throw. If that is unsatisfactory, sprinkler heads have a screw that protrudes into the stream of water emitted from the nozzle. Adjusting the screw changes the radius of throw. The screw on the top of the spray nozzle (Figure 16) is used to change the radius of throw. When adjusting the screw to increase the radius of throw to the proper distance, the nozzle size or type may need to be changed.



Figure 12: Gaskets in place.



Figure 13: Gasket Missing

Additional Tips

- In some cases, a pinched or plugged pipe results in inadequate water at one or more sprinkler heads. This can be checked by using a pressure gauge. (See Figures 14 and 15).
- If the pressure at the sprinkler head is too low, reduce the nozzle size (rotor and impact sprinkler heads) or change spray nozzles to stream rotor nozzles (pop-up sprinkler body). This may solve the problem (Figure 16), but this will reduce the radius of throw on rotors and impact sprinklers.
- Too high a pressure results in misting (Figure 17). Install a pressure regulator on the zone valve or at the back-flow pressure device and adjust the pressure. These are available from your irrigation supply store (Figure 18).
- Trouble Shooting the system hydraulics
 - A good tool for measuring sprinkler pressure is a 2 1/2 -inch, liquid filled, 100 psi pressure gauge (\$16 at an irrigation store). Simple pressure testing units are shown in Figures 14 and 15.
 - An optional method of setting up the pressure gauge is provided in (Figure 19). Add a 2 foot by 1/4-inch air hose, with an air chuck (\$16 at an auto parts store) on the opposite end from the pressure gauge. The attachment for a pop-up sprinkler is a specialized tee that threads between the top of the riser stem and the spray nozzle. A 1/4 -inch Schrader valve is screwed into the leg of the tee. The air chuck goes on the Schrader valve and the connection is completed. Turn on the zone valve and read the pressure at the spray head nozzle.
 - For measuring the pressure at impact and rotor sprinklers, use a pitot-static tube (\$10 irrigation store) thread a Schrader valve into the back of the pitot tube, then connect the air chuck to the Schrader valve.



Figure 14: Pressure tester for pop-up spray head



Figure 15: Pressure tester for rotor and impact sprinkler heads.



Figure 16: From left to right, MP rotator stream nozzle, spray nozzle and RainBird stream nozzle.



Figure 17: Misting due to excessive pressure

- To troubleshoot the hydraulics of the irrigation zone, turn on the water and measure the pressure at the closest sprinkler to the zone valve, and then the farthest sprinkler from the zone valve. Figure 14 shows the pressure gauge attachment for pop-up spray heads. Remove the nozzle and filter, screw on the adapter tee, and replace the filter and nozzle. To test the pressure of impact and rotor sprinkler heads, insert the pitot tube in the water stream as shown in Figure 20 and read the pressure on the gauge.

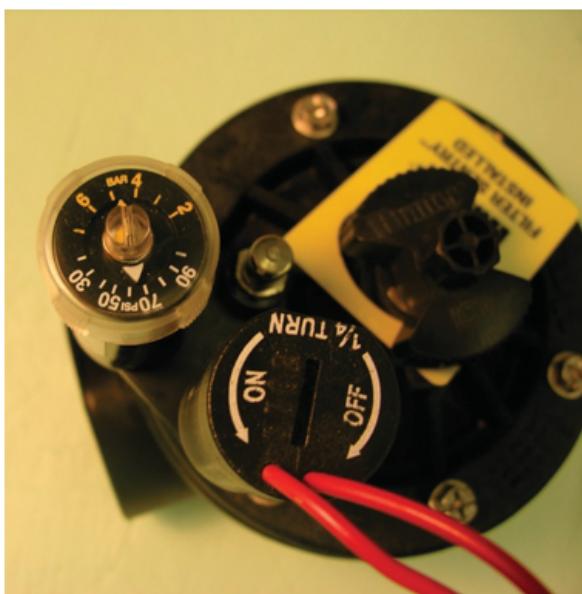


Figure 18: Pressure regulator on an irrigation zone valve.



Figure 19: Pressure testing tools. Note saw for cutting roots.



Figure 21: Compression



If the difference in pressure is 10 percent or less, the hydraulics for the zone are good. If the pressure is between 10 percent and 20 percent, the system hydraulics are fair. If the difference in pressure is greater than 20 percent, there is a problem. Measure the pressure at the middle sprinkler in the zone. If the pressure is between 5 percent to 10 percent of the first sprinkler, the problem is in the downstream pipe.



Figure 20: insert the pilot tube in the water stream

If the difference in pressure is 10 percent or less, the hydraulics for the zone are good. If the pressure is between 10 percent and 20 percent, the system hydraulics are fair. If the difference in pressure is greater than 20 percent, there is a problem. Measure the pressure at the middle sprinkler in the zone. If the pressure is between 5 percent to 10 percent of the first sprinkler, the problem is in the downstream pipe.

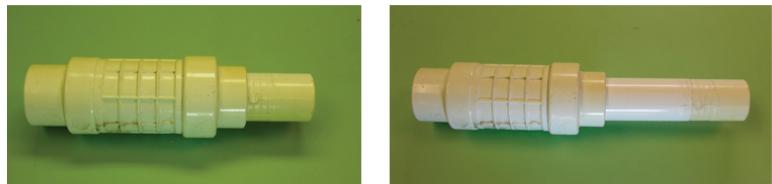


Figure 22: Slip fitting showing extension fitting.



- Compression fittings and slip connections make repairs on PVC pipe easy (Figure 21 and 22).
- When you hire an irrigation contractor to correct irrigation system problems, use the Irrigation Association Consumer Handbook, www.irrigation.org, to ensure they are qualified and can explain the above troubleshooting procedure on how to troubleshoot the hydraulics.

- If you make the repairs to any pipes, remove the nozzles from the sprinkler heads downstream of the repair and turn on that zone to flush-out the fillings and dirt resulting from the repair. Replace the nozzles.
- **Lawn Irrigation Self-Audit:** Arid climates like we have in Colorado require us to learn more about our lawns and how to water them. You can use the LISA toolkit to help you use your water more efficiently when irrigating your lawn. Landscape irrigation audits have been around for several years, however professional audits can be costly. For this reason, Colorado State University Extension developed the LISA toolkit for homeowners to take action against irrigation practices that can lead to over or under watering of lawns. The LISA toolkit has all the necessary tools you will need to measure the water application rates for your lawn irrigation system at home. The toolkit is designed to be used for lawns that are irrigated using sprinkler systems. Please visit www.lisa-audit.colostate.edu to access additional resources or turn your lawn irrigation data into a customized irrigation schedule.

References

- Colorado State University Extension Lawn Irrigation Self-Audit, www.extension.colostate.edu/topic-areas/yard-garden/lawn-irrigation-self-audit-lisa/
Hunter Industries, www.hunterindustries.com
The Irrigation Association, www.irrigation.org
RainBird, www.rainbird.com
Toro Irrigation, www.toro.com/watermgmt
Colorado State University Extension Fact Sheet 4.714, Backflow Prevention Devices, and 4.719, Wintering Sprinkler System

Colorado State University, U.S. Department of Agriculture and Colorado counties cooperating. CSU Extension programs are available to all without discrimination. No endorsement of products mentioned is intended nor is criticism implied of products not mentioned.

Colorado State University, U.S. Department of Agriculture and Colorado counties cooperating. CSU Extension programs are available to all without discrimination. No endorsement of products mentioned is intended nor is criticism implied of products not mentioned.