



① BOX UNFOLDED, PAPER THINE IN PLACE. BAG FLAPS TO PLESH SIDE DOWN WITH CLEAN TAGS & LOOSE ENDS IN THE CENTER.

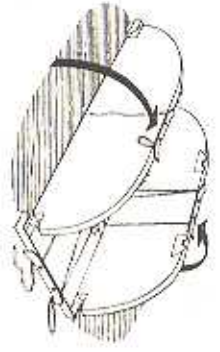

② RAISE & HOLD SIDES


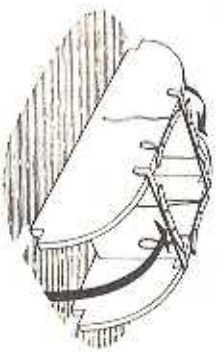


③ RAISE ENDS, CLOSING AND LOCKING THE BOX. TIE FLEECE.



④ RELEASE ENDS, UNFOLDING BOX, WEIGH, TAG, AND PACK FLEECE IN WOOL BAG.

OPERATION OF THE WOOL BOX

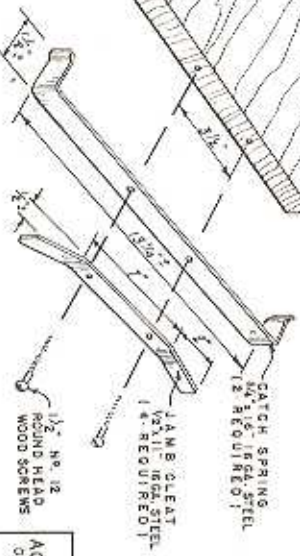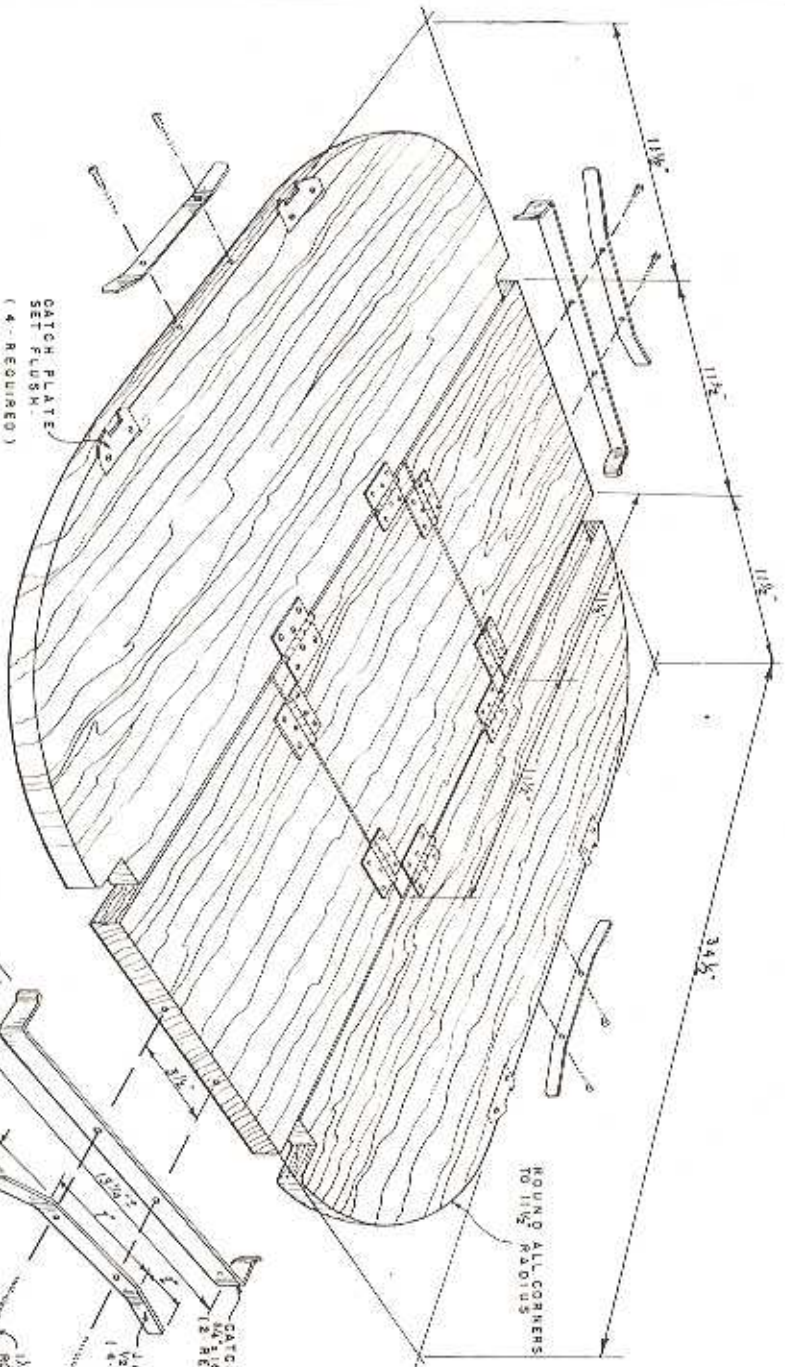

NOTES:  
 1. DIMENSIONS SHOWN ARE BASED ON USE OF STANDARD 1 1/2" LUMBER DRESSED. THIS IS ADEQUATE FOR FLEECES OF 8 TO 10 POUNDS.  
 2. THE PLAN MAY BE MODIFIED AS DESIRED TO SUIT INDIVIDUAL PREFERENCES.  
 3. ALL WOOD PARTS SHOULD BE Sanded & CORNERS SMOOTHLY ROUNDED. REMOVE CORNERS & BURRS FROM METAL PARTS TO AVOID SAGGING WOOL.

PLAN EX 5806 SHOWS DETAILS OF A WOOL PACKING BAG WHICH HOLDS THE WOOL BAG IN A CONVENIENT POSITION.

CUTTING & ASSEMBLY DIAGRAM